
# heatmiser


heatmiser	
Underfloor Heating Control System	
CC Manufactured in Lik Dp Healmenr (JK List were headman ere ski	on AURS

## Model: UH1

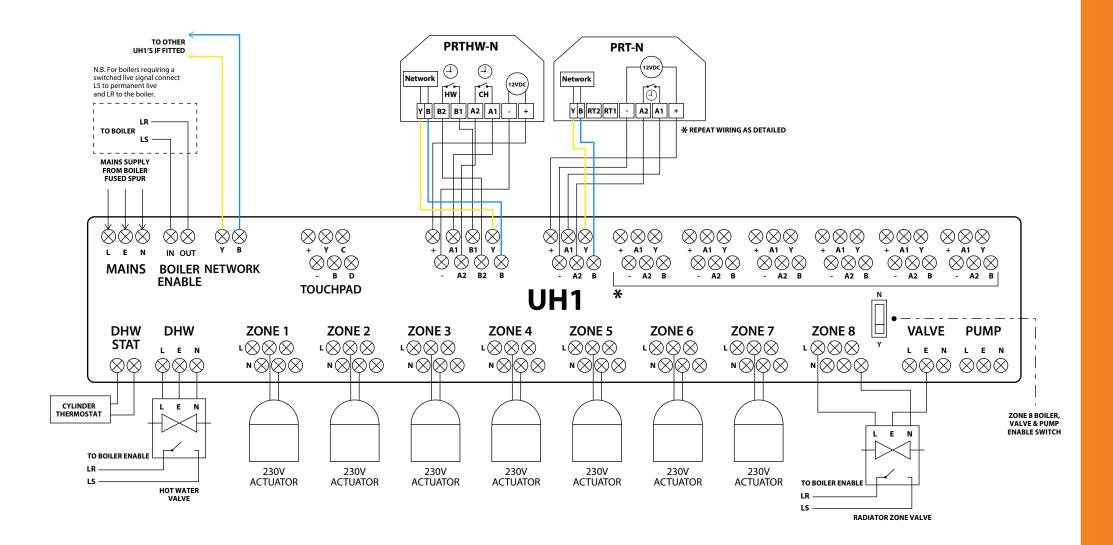

This equipment should be installed by an appropriately qualified / registered electrician. Ensure all wiring is correct before applying power. The warranty does not cover any damages caused by incorrect wiring and installation.


## Wiring Diagram - UH1 With Hot Water & Radiator Circuit

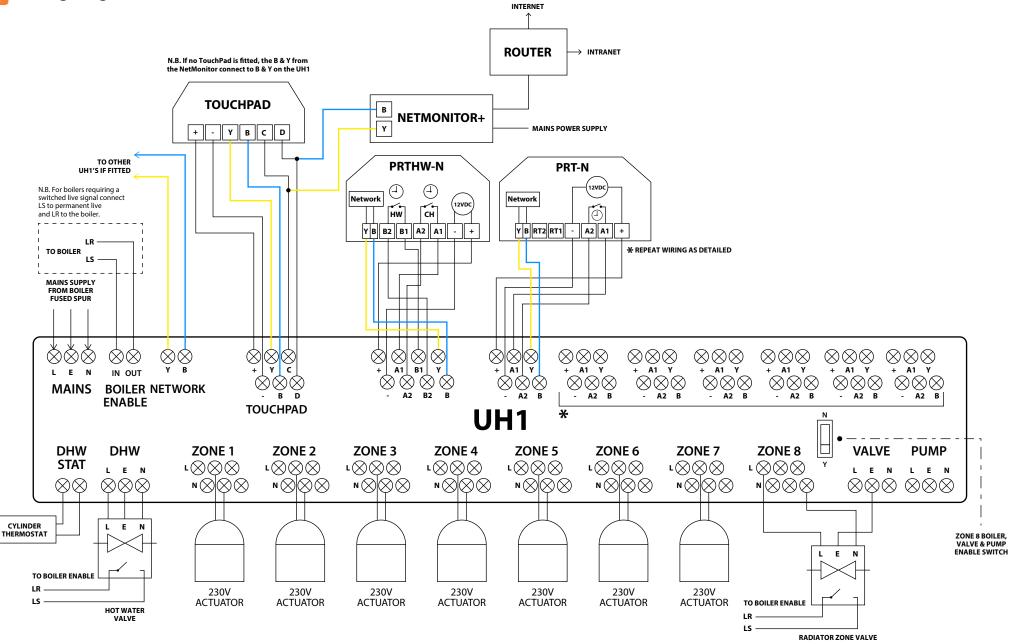

This equipment should be installed by an appropriately qualified / registered electrician. Ensure all wiring is correct before applying power.

The warranty does not cover any damages caused by incorrect wiring and installation.

## Wiring Diagram - Connecting Multiple UH1's

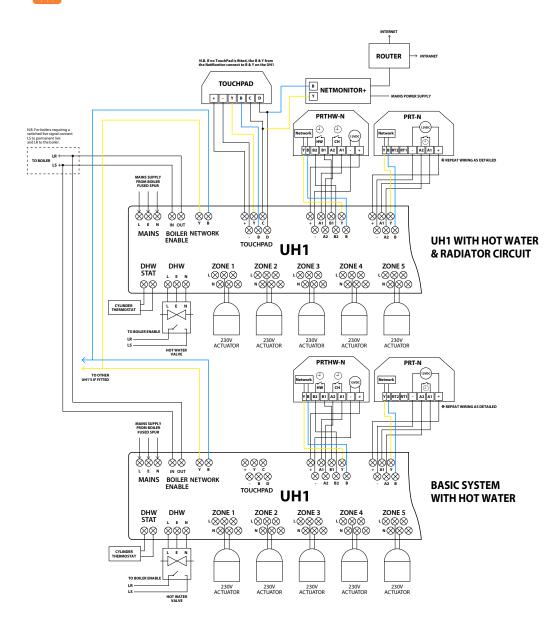



## Wiring The UH1

#### Using BELDEN 9538 cable on the Heatmiser Network

When using this cable make sure the shield drain wire (the silver unshielded wire) is connected to earth at the UH1.

#### Using CAT5-FTP cable on the Heatmiser Network

Generally CAT5 cable comes in 3 types:

- 1. CAT5-UTP unshielded
- 2. CAT5-FTP shielded lower cost
- 3. CAT5-STP shielded higher cost

#### For the Heatmiser network you should use CAT5-FTP - This is SHIELDED CAT5 OR CAT5E FTP stands for foil screened twisted pair

The network uses digital communications to talk between the thermostats and Touchpad or NetMonitor (+).

This digital comms line needs to be protected from interference and the CAT5-FTP does this in 2 ways: 1. The cable is shielded from outside interference

2. The cables are twisted around each other in pairs

as follows:		
Brown to +	Brown/white to –	
Blue to B	Blue/white to Y	
Orange to A1	Orange/white to A2	
Green to B1	Green/white to B2	(PRT/HW-N and PRT/HW-NTS only)

Each set of connections forms a twisted pair in the cable canceling out any interference to or from the cables.

If your cable colours are different, make sure you use a twisted pair for each of the following:

1. +&-

Connect

- 2. A1 & A2
- 3. B1 & B2
- 4. Y&B

When using this cable make sure the shield drain wire (the silver unshielded wire) is connected to earth at the UH1 end.

This equipment should be installed by an appropriately qualified / registered electrician. Ensure all wiring is correct before applying power. The warranty does not cover any damages caused by incorrect wiring and installation.

#### Wiring Centre



## **Heating Professionals:**

Request a copy of our product installation guide containing detailed technical specifications for our complete product range: www.heatmiser.com/guide

## Want More Information?

Call our support team on: +44 (0)1254 669090 Or view technical specifications directly on our website: www.heatmiser.com



## **Products Commonly Used With UH1 Wiring Centre:**



### **Other Heatmiser Wiring Centres:**

