

Central Wiring Switch Boxes


Model: Heatmiser UH2



230v 4 Zone Wiring Centre

The UH2 can be used in conjunction with our mains thermostats.

The UH2 provides central switching of up to four zone actuators as well as providing an output for a hot water cylinder and the heating system boiler and pump. When used for underfloor heating, an option is available to use zone 4 for conventional radiator control. Up to six actuators can be connected to each zone.

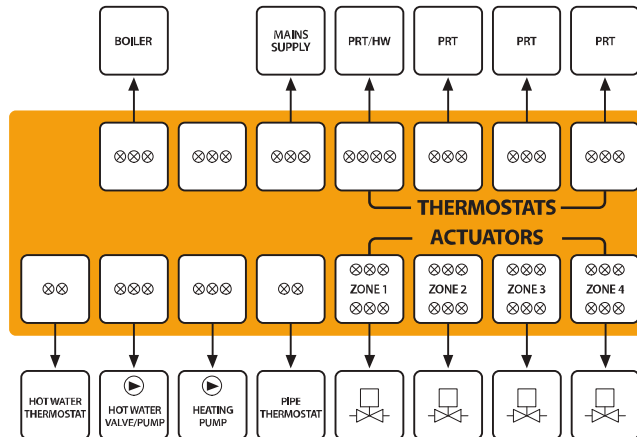

Model: Heatmiser UH3



230v 8 Zone Wiring Centre

The UH3 is designed to work with our four channel 230v time clock (TM4) and 230v Set back thermostat (DS-SB) but equally could be used with any 230v room thermostat. Up to eight zones can be controlled from the UH3. On board the UH3 are two heating time channels, each zone allows you to specify which time channel it should follow. Two additional time channel connections are provided for hot water control or other auxiliary devices. On demand from any zone, a 230v output is provided to switch the relevant zone actuator, underfloor heating pump and valve. A volt free connection is supplied for the boiler, making it compatible with almost all types of boilers. A simple slide switch makes zone 8 suitable for controlling a radiator zone. When used for controlling radiators, zone 8 does not enable the underfloor heating pump, valve and boiler. Up to four actuators can be connected to each zone.

